



RY36 REPLACEMENT BLADE INSTALLATION

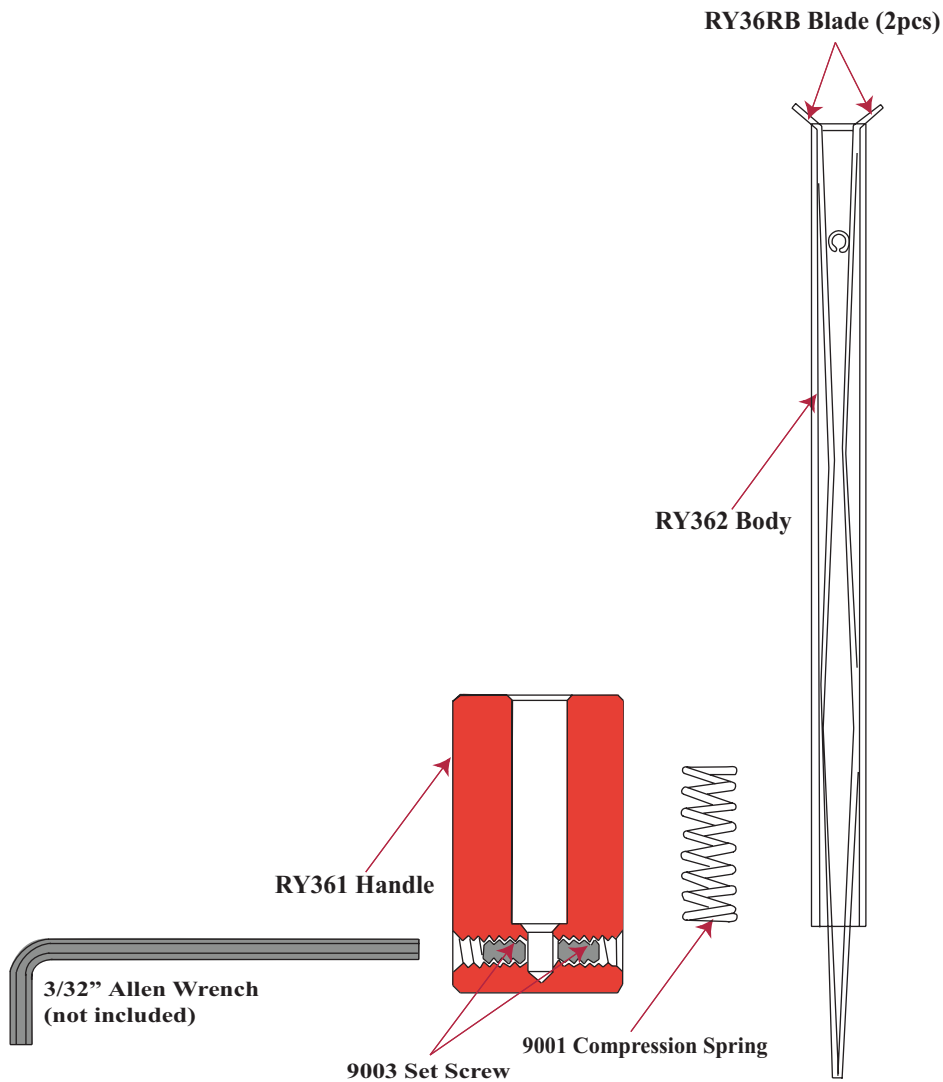

Back off set screws as illustrated

Drop Compression spring into Handle as illustrated

Install two Blades into body as illustrated

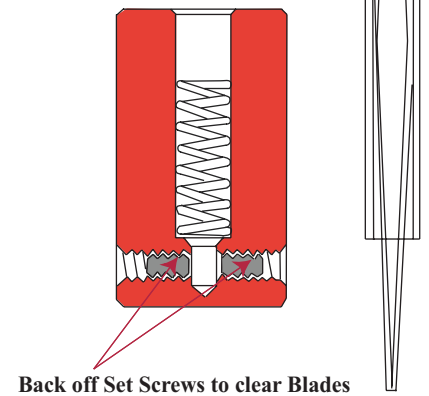

Apply downward force to Blades and tighten set screws

Push down on body and blades until blades bottom out in Handle as illustrated

Push down on Body and blades to compress the spring as illustrated

