



RY57 REPLACEMENT BLADE INSTALLATION

There are two Set Screws holding the Blade—
 You only have to loosen one Set Screw.

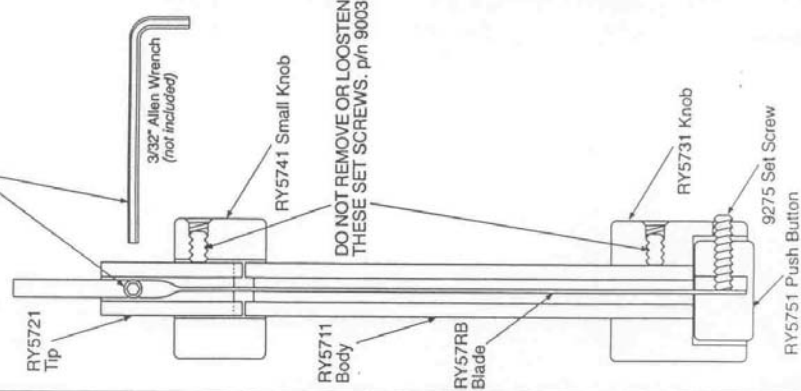

DO NOT REMOVE OR LOOSEN THESE SET SCREWS. p/n 9003


RY57RB Replacement Blade

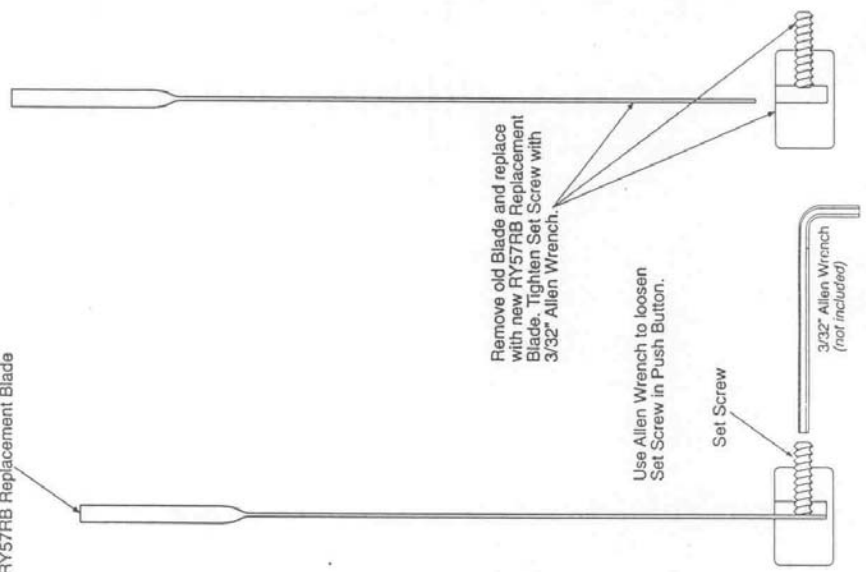

Remove old Blade and replace with new RY57RB Replacement Blade. Tighten Set Screw with 3/32" Allen Wrench.

Use Allen Wrench to loosen Set Screw in Push Button.

RY57RB Replacement Blade

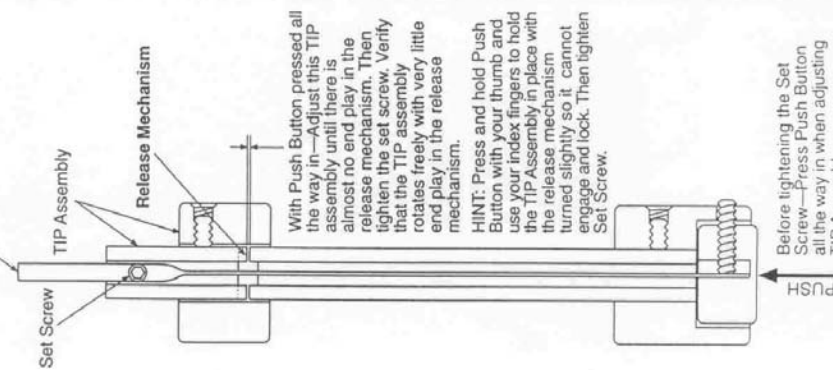

With Push Button pressed all the way in—Adjust this TIP assembly until there is almost no end play in the release mechanism. Then tighten the set screw. Verify that the TIP assembly rotates freely with very little end play in the release mechanism.

HINT: Press and hold Push Button with your thumb and use your index fingers to hold the TIP Assembly in place with the release mechanism turned slightly so it cannot engage and lock. Then tighten Set Screw.

Before tightening the Set Screw—Press Push Button all the way in when adjusting TIP Assembly.